


Installation Instructions

BR5 & 5.5 Light Bar Part # 26573T

| Parts List | | | | |
|------------|-------|-------------|----------------------------|-------------|
| Item | QTY | Code | Description | Max Torque |
| 1 | 1 pc | 26573T | Light Bar | |
| 2 | 1 pc | 26373T0AA | Light Bar Mesh Cover | |
| 3 | 1 set | KTE-G26573T | Hardware bolt kit | |
| 4 | 4 pcs | | 3/8 x 1 1/4" Hex Head Bolt | 30 Ft. Lbs. |
| 5 | 8 pcs | | 3/8" Flat Washer | |
| 6 | 4 pcs | | 3/8" Lock Washer | |
| 7 | 4 pcs | | 3/8" Hex nut | 30 Ft. Lbs. |
| 8 | 1 set | | Gasket bracket | |

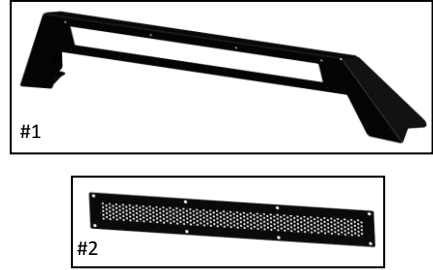

Tool Required:

5/32" Hex key
 7/16 & 9/16" Socket
 7/16 & 9/16" Wrench

Approximated installation time: 20 min.

Read the installation instructions completely and verify that all of the parts listed are accounted for. If you have defective, missing or damaged parts or need assistance, please contact Go Rhino Products for fast, friendly customer service at: 1-888-427-4466 or email: warranty@gorhino.com

To maintain and care this product keep it clean and do not use abrasive cleaners or polish waxes. It is recommended to use only non-abrasive automotive wax such as pure carnauba to avoid scratches and rust.

Step-1 Install the gasket bracket on the bracket Light Bar.

Step-2 If Installed, remove the (6) bolts and mesh cover from the Bumper Shell.

Step-3 Locate the Light Bar attachment holes in the Bumper Shell and secure the Light Bar to the Bumper Shell using (4) 3/8" x 1 1/4" hex bolts, (8) 3/8" flat washers, (4) 3/8" lock washers, and 3/8" hex nuts.

Step-4 Align the Light Bar and tighten all nuts and bolts.

Step-5 Reinstall the mesh cover on the Bumper Shell

