



MODEL SPECIFIC GUIDE

Hidden Hinge Version

Model 2122 Ford F250/F350 Ext/Crew Cab
6.5' Short Bed 2008-Current *(with tailgate step)*




Note: This Cover will work with a tailgate step.



MODEL SPECIFIC GUIDE Hidden Hinge Version Model 2122 Ford F-250/F-350 6.5' Short Bed 2008-Current

RE: Step 2 on the Quick Start Guide


Measurement for the rear mounting bracket is 55 1/4" from the back side of the bulkhead to the front edge of the bracket.

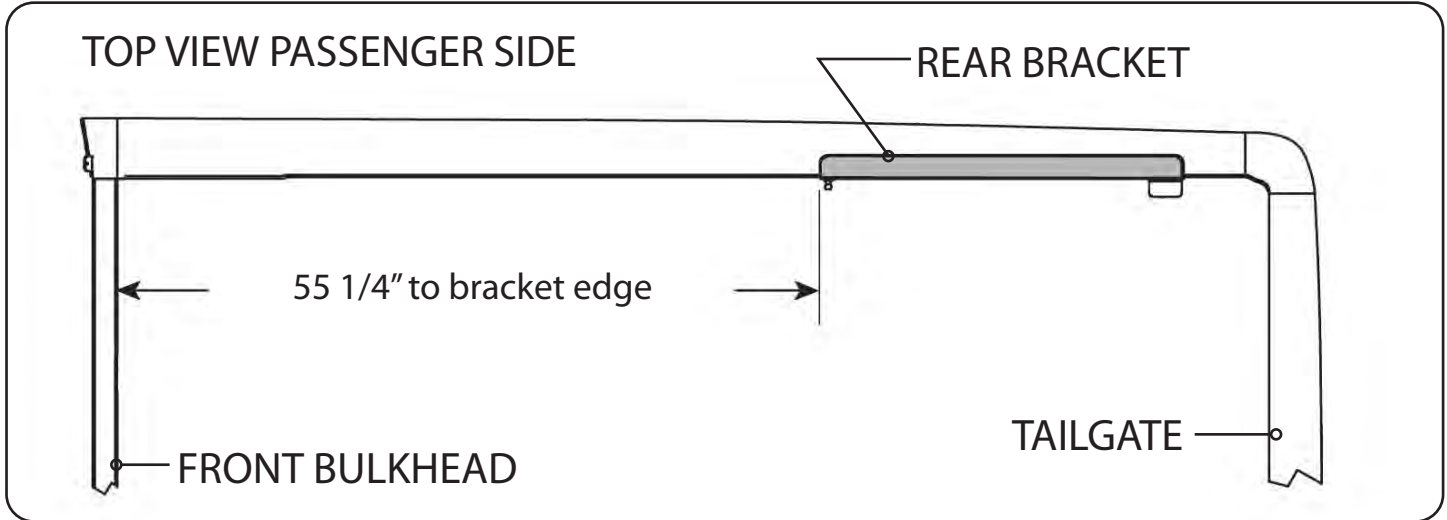

RE: Step 3 on the Quick Start Guide

Measurement for the front mounting bracket is 16 3/4" from the back side of the bulkhead to the end of the bracket.

The fit of the cover to the truck bed is determined by the front mounting brackets. This measurement is a good starting point. Unfortunately not all truck beds are assembled 100% square, so some adjustments may be necessary after the cover is set on the truck.

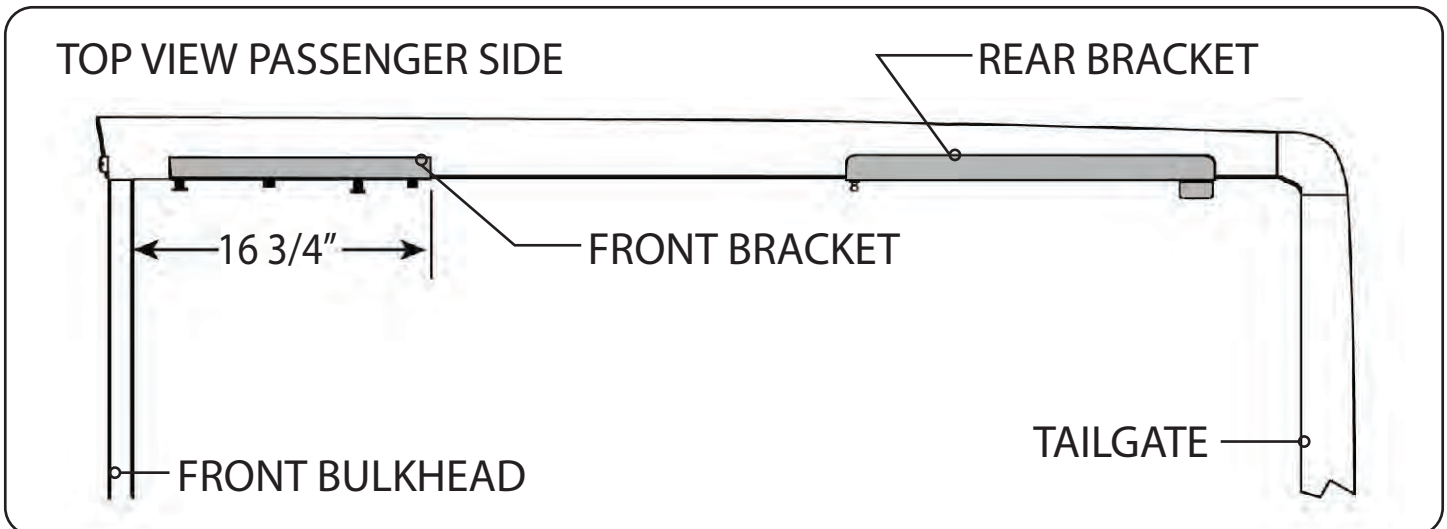

UnderCover, Inc.
P.O. Box 620
Rogersville, MO 65742
(417) 753-8000
(866) 900-8800

www.undercoverinfo.com
sales@undercoverinfo.com

© 2010 UnderCover, Inc.
All rights reserved.