




NISSAN NP300 POWER BOARD

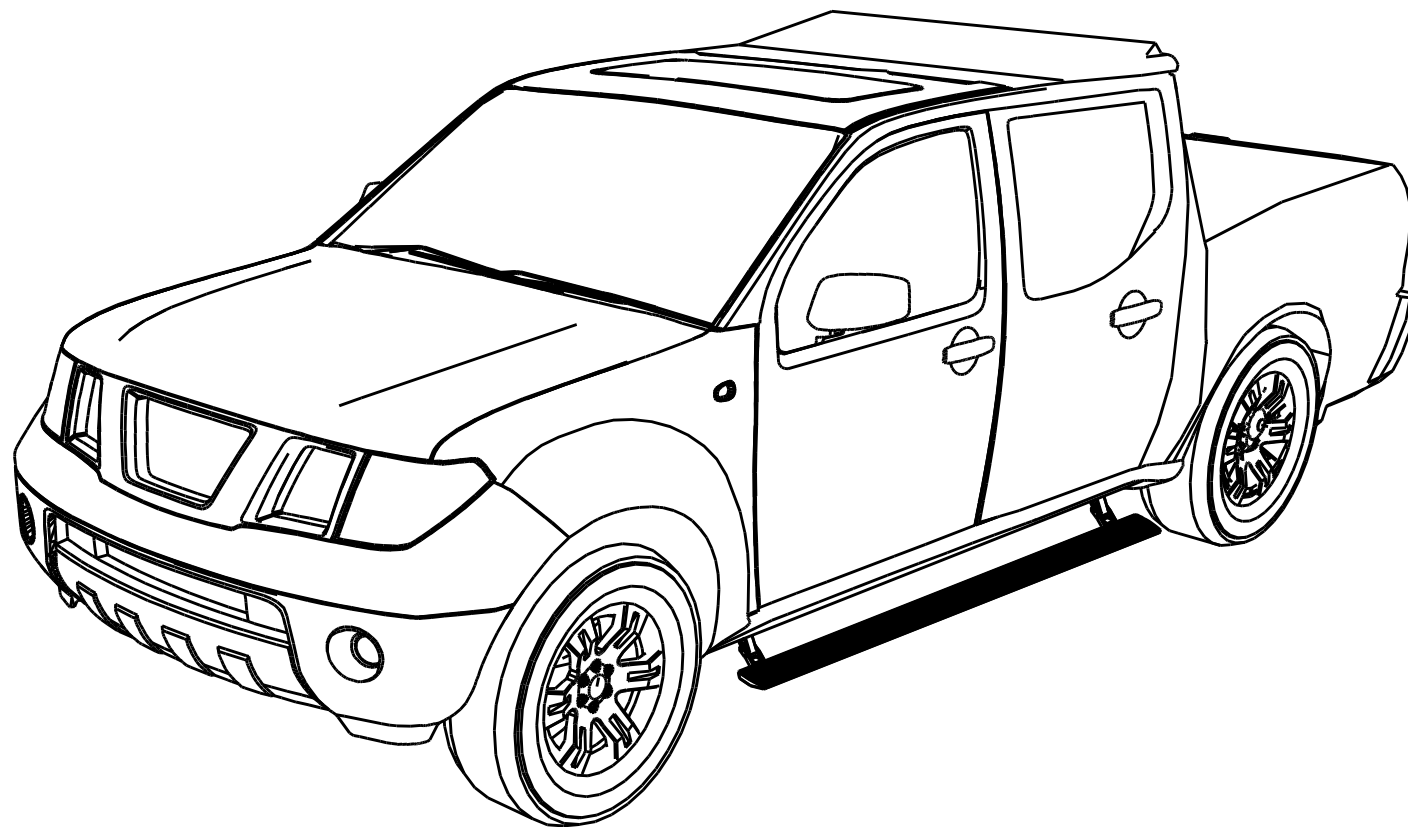

NISSAN NAVARA
NP300

INSTALLATION
GUIDE

APPLICATION: NISSAN NAVARA NP300 2015

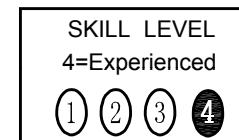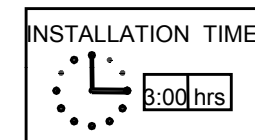


PART: PST05-1710

TOOLS REQUIRED:


- ① 5 mm hex key wrench (allen wrench)
- ② 13mm socket
- ③ Pry
- ④ Wire stripper/cutter
- ⑤ Vinyl tape
- ⑥ Screwdriver

Contents

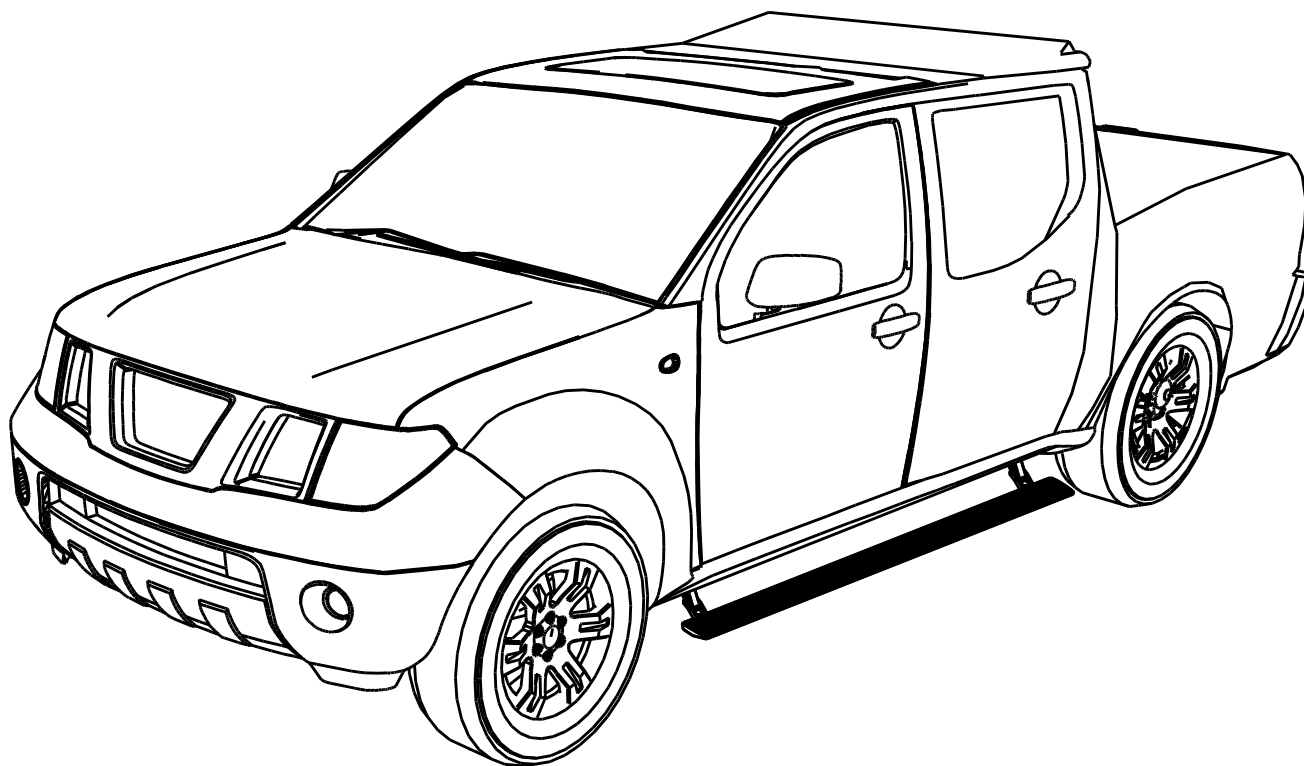

Product Technical Specification.....	02
Product Packing List	03
Mechanical Installation.....	06
Electrical Installation.....	11
Maintenance.....	17
Warranty Card	18

Product Technical Specifications

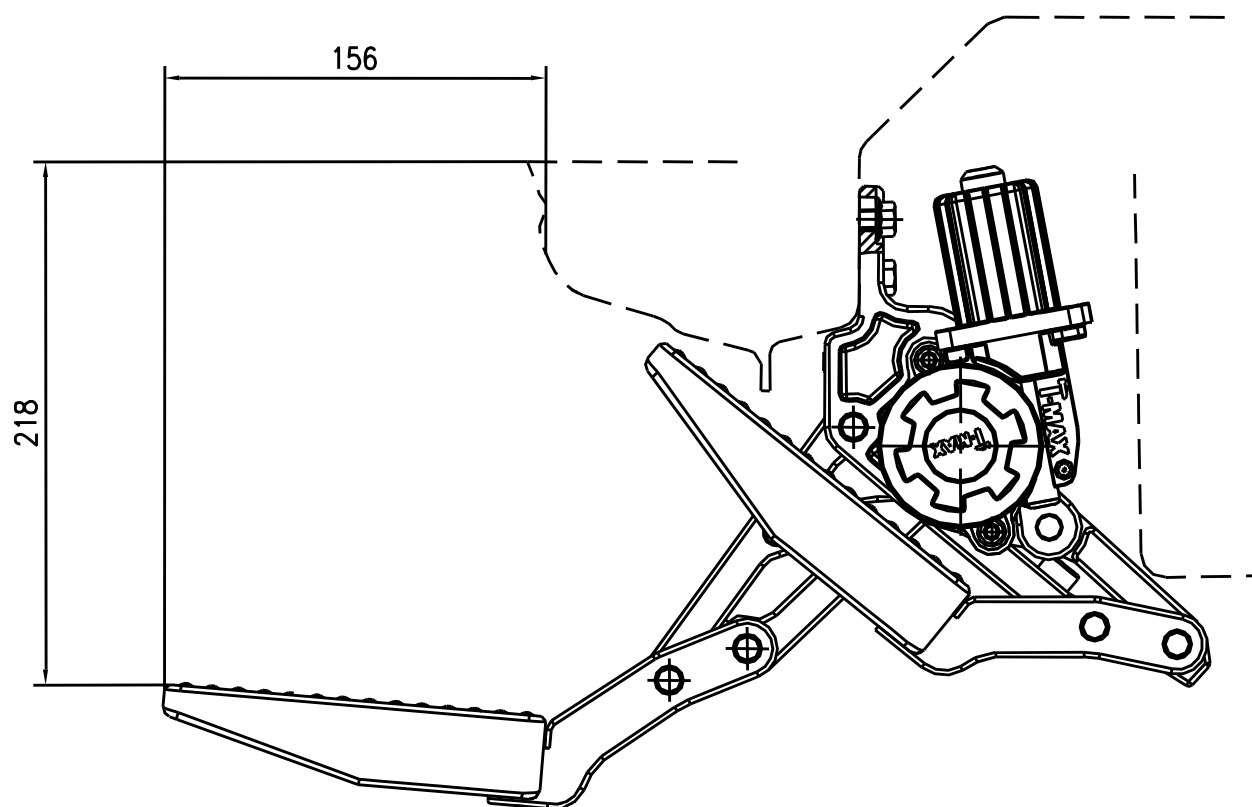


Rated voltage: 12V
 Rated load: $\leq 300\text{kg}$
 Length: 1.86m
 Gross weight: 22kg
 Forward extension size: 156mm
 (Horizontal distance between the edge of power board and the vehicle door when the board extends)
 Step falling dimension: 218mm
 (Vertical height difference between the edge of power board and the vehicle door while board extending.)
 (Both dimensions of forward and falling are theoretical, which may vary due to uncertainties such as installation error, manufacturing errors of vehicle bottom and etc.)

Note: Impact load is not allowed.


Please make sure the children and the aged will keep 20cm safe distance while power board is working to avoid any bumped or jammed.

Product Packing List

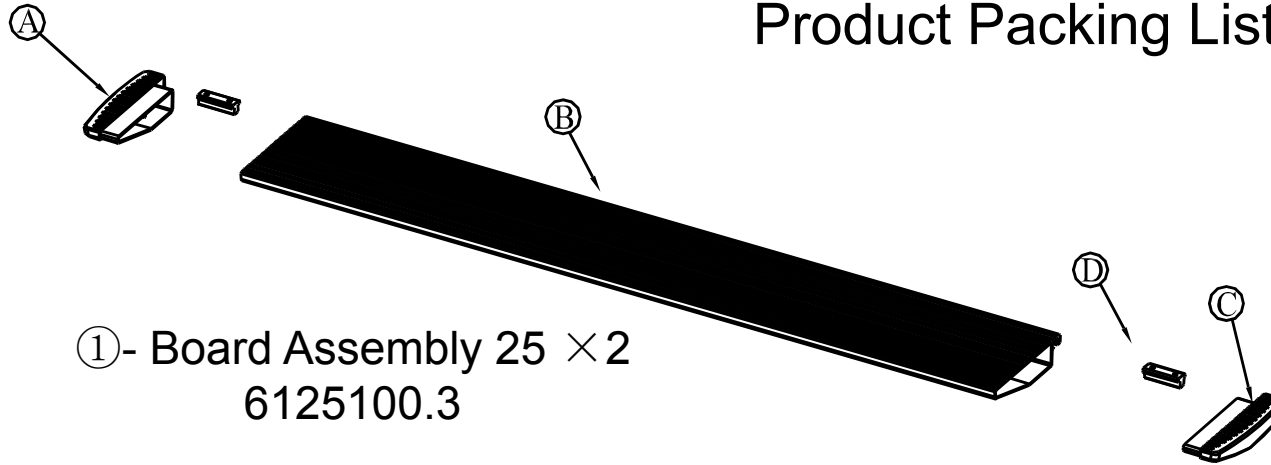


- | | | | |
|-----|-------------|-----------------|------|
| (A) | 6126100.3-4 | End cap left B | (×1) |
| (B) | 6125100.2-1 | Board 25 | (×1) |
| (C) | 6126100.3-1 | End cap right B | (×1) |
| (D) | 6126100.3-3 | T-nut | (×2) |


① - Board Assembly 25 × 2
6125100.3

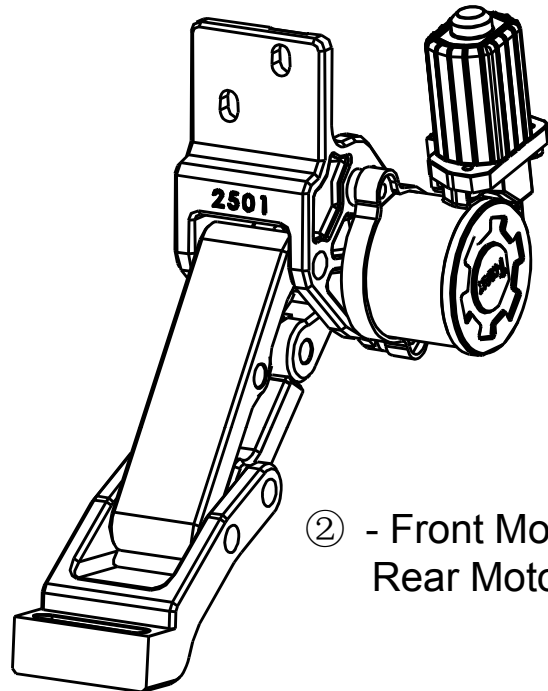


② - Front Motor Linkage Left 25×1
Rear Motor Linkage Right 25×1
6125100.1L

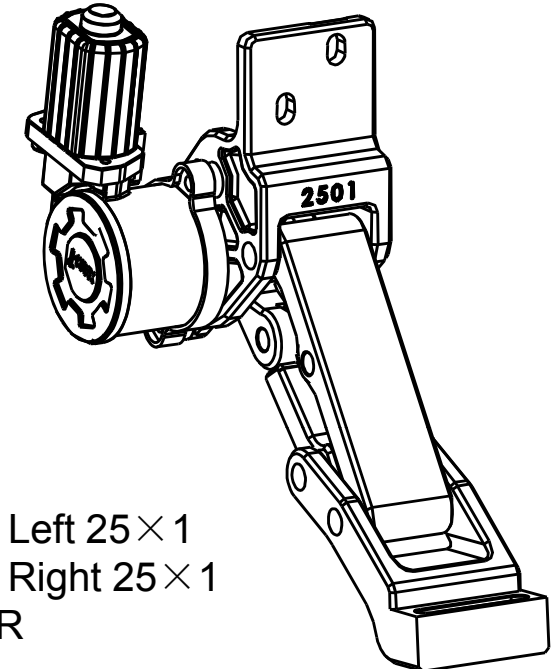


③ - Rear Motor Linkage Left 25×1
Front Motor Linkage Right 25×1
6125100.1R

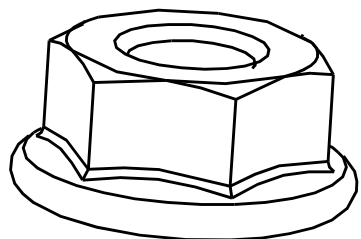


④ - Hexagon Flange nut × 8
GB/T6177.1-2000 M8

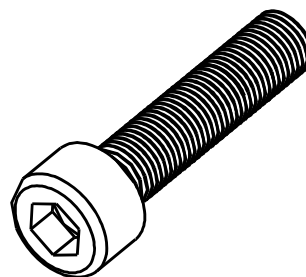


⑤ -Socket Cap Bolt × 8
GB/T70.1-2000 M6×25

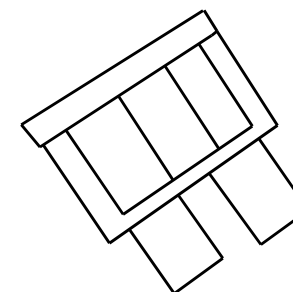


⑥ - Fuse × 2

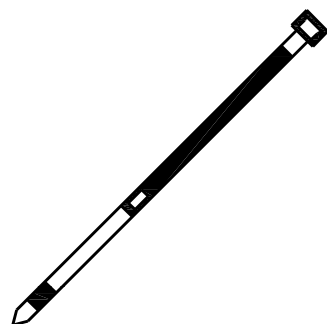


⑦ -Cable Tie × 25
GB/T22344-2008 5×300

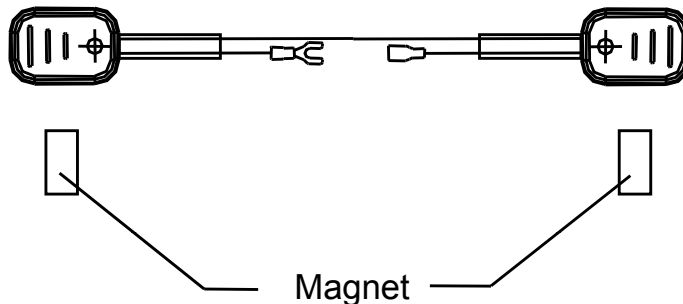


⑧ -Magnetic Inductor × 2
Magnet × 4

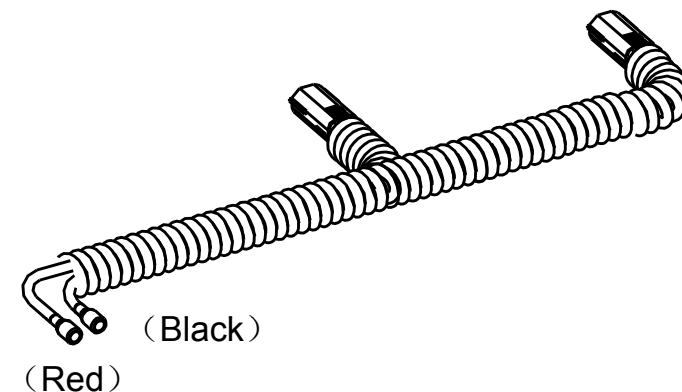

⑨ -Motor Connection Cable 25×2
6125102.4.3

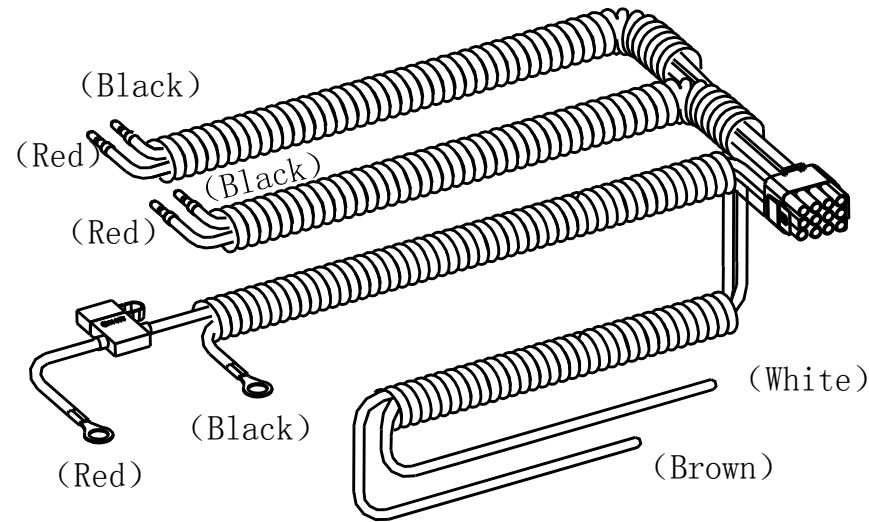


⑩ -Control Input Cable 25×1
6125100.4.1

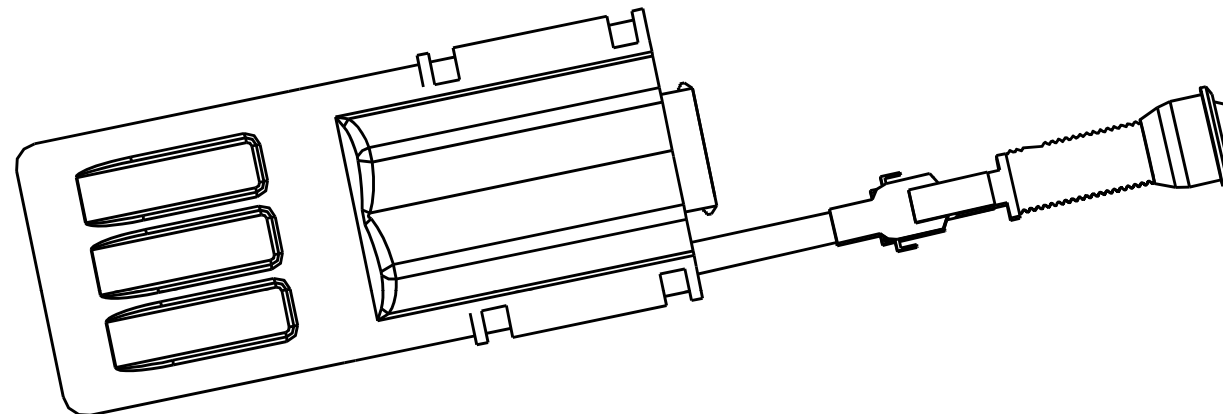

⑪ -Controller Assembly 25×1
6125100.4.6



Mechanical Installation

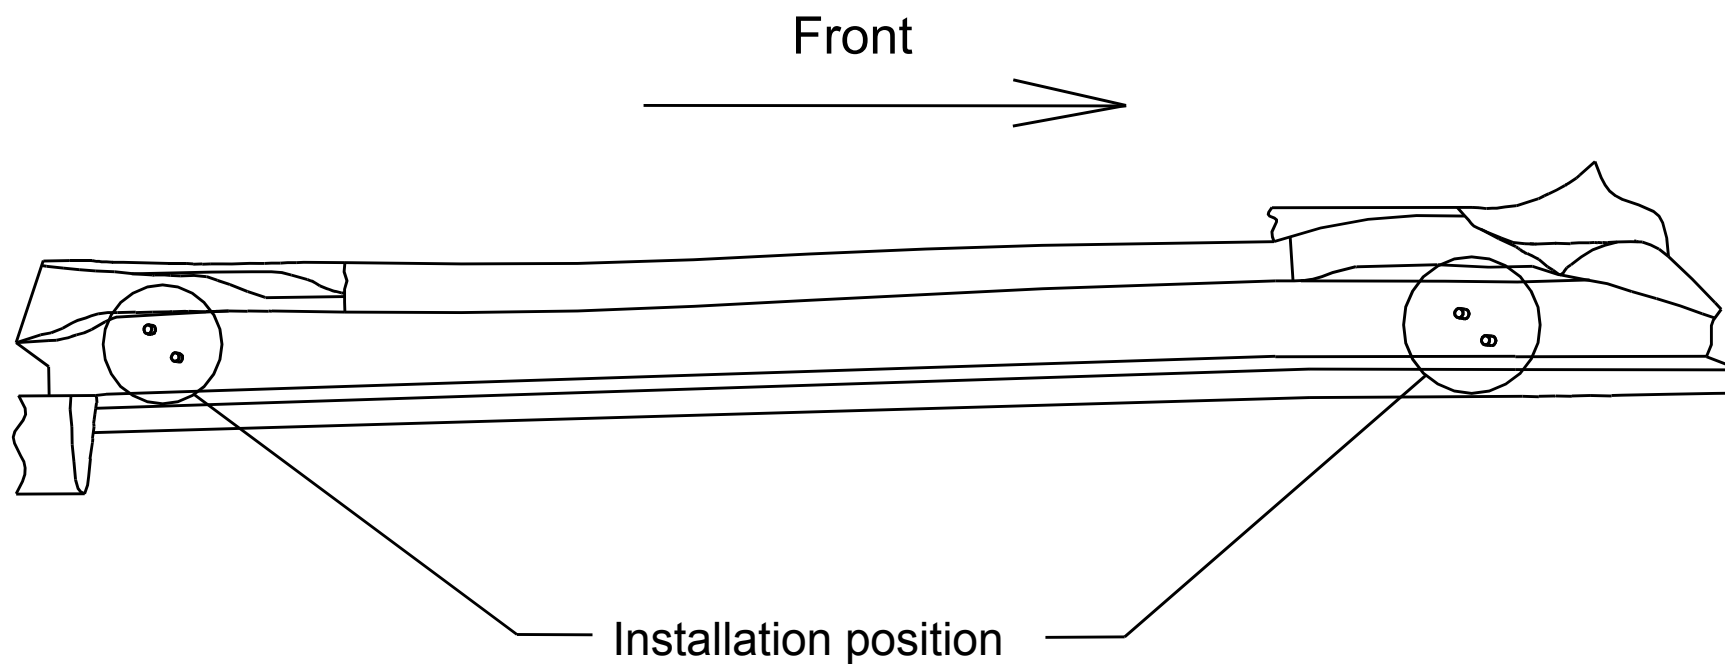


Installation position
on the Left

As shown in the picture: The installation screw of motor linkage should be matched with the original board fixing hole on the vehicle.

Front

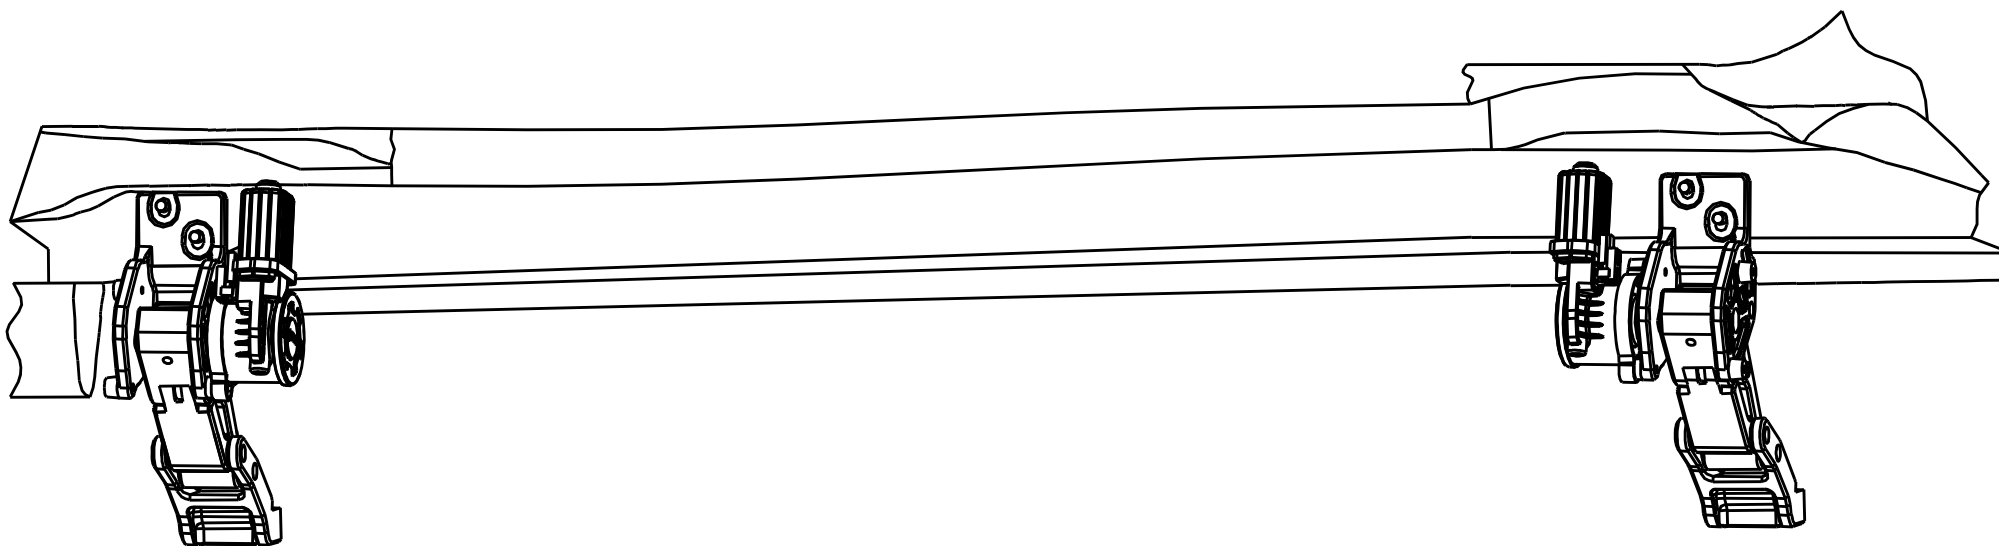

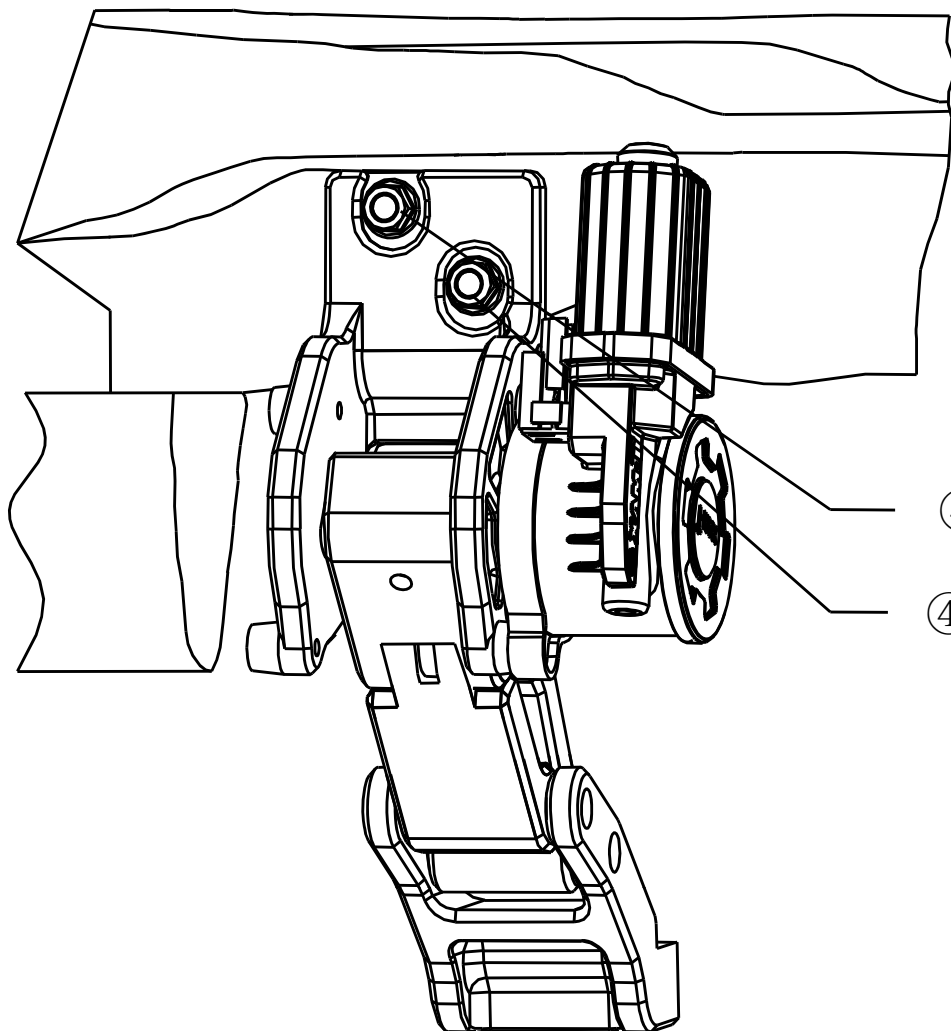


Step 1: As shown in the picture, screw the hexagon flange nut onto the corresponding position and pre-tighten it. Tighten the above hexagon flange nut . (Tightening torque 30Nm)

④ - M8 Hexagon flange nut

④ - M8 Hexagon flange nut

On the rear left side

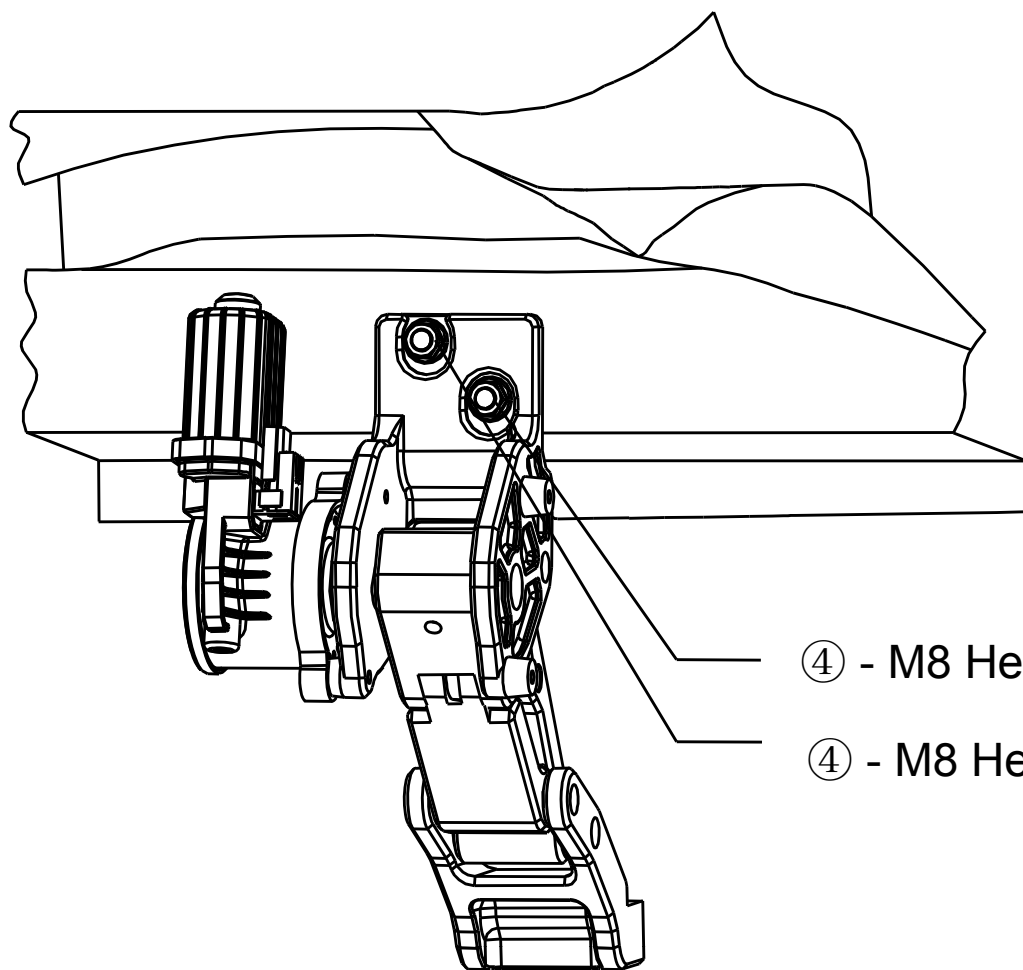


Step 2: As shown in the picture, screw the hexagon flange nut onto the corresponding position and pre-tighten it. Tighten the above hexagon flange nut . (Tightening torque 30Nm)

④ - M8 Hexagon flange nut



④ - M8 Hexagon flange nut

On the front left side

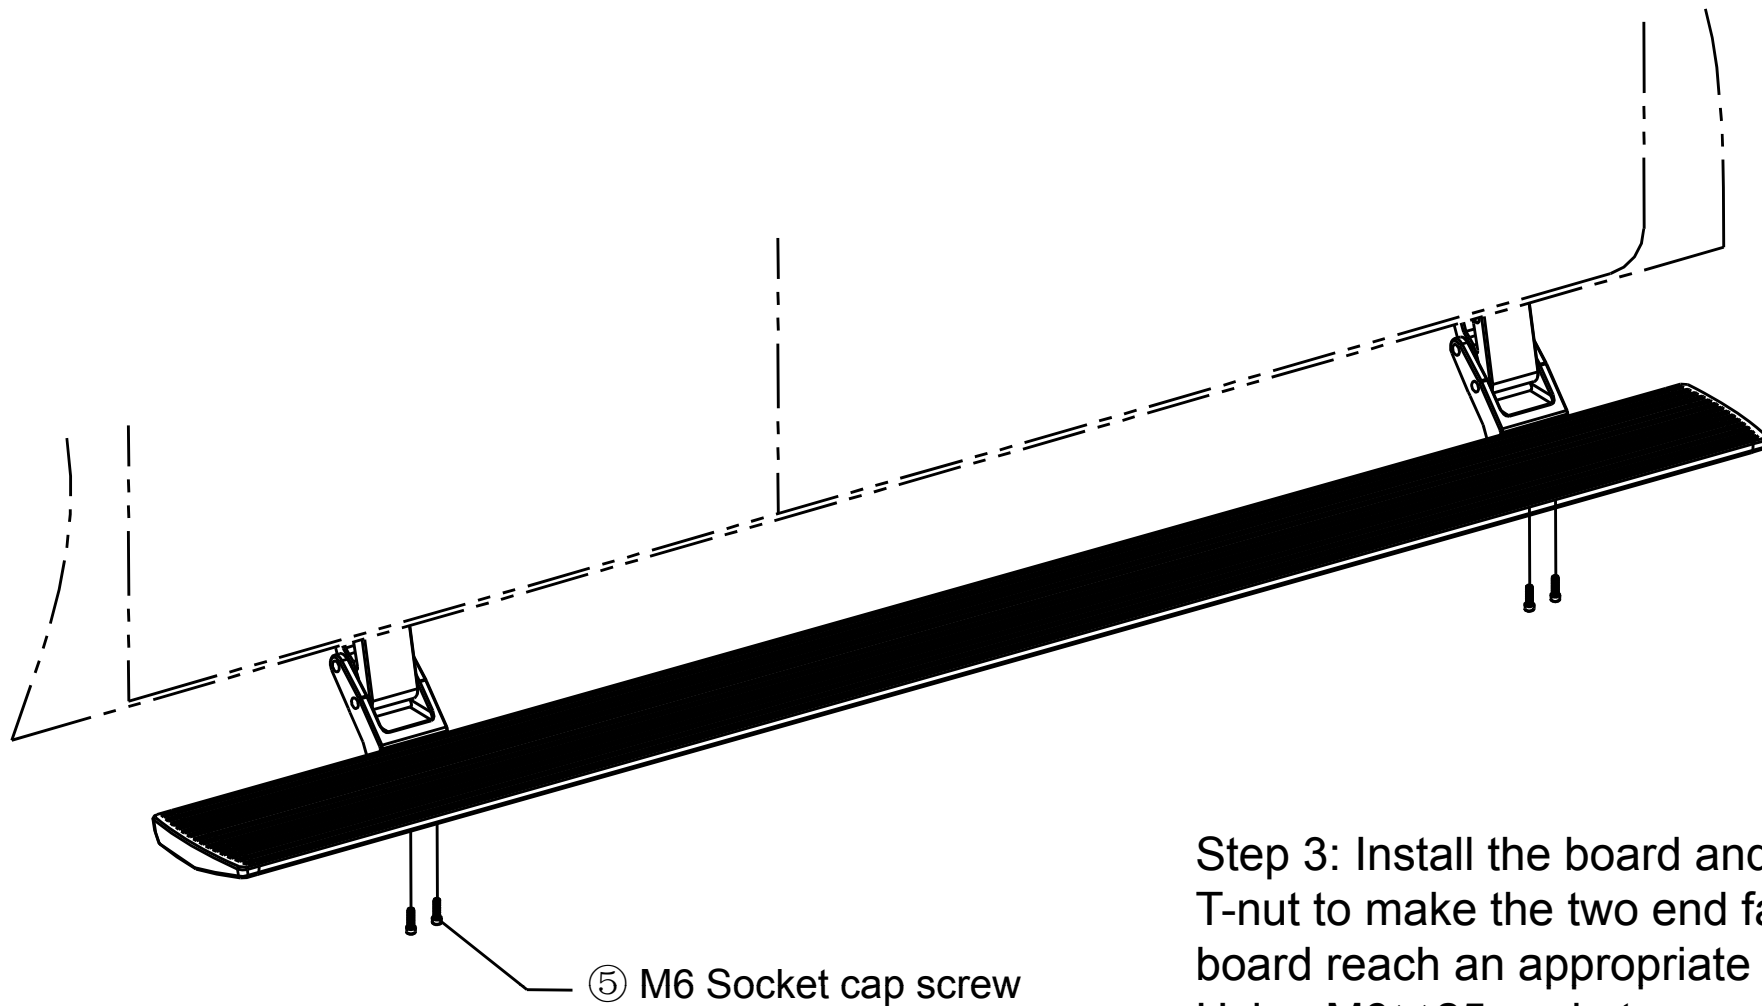

Step 3: Install the board and adjust the T-nut to make the two end faces of the board reach an appropriate positions. Using M6×25 socket cap screw for connecting and tightening (tightening torque is 12Nm).


Electric Installation of Magnetic Control

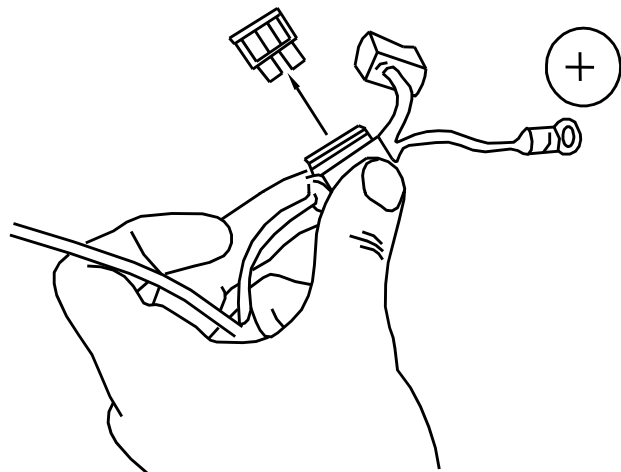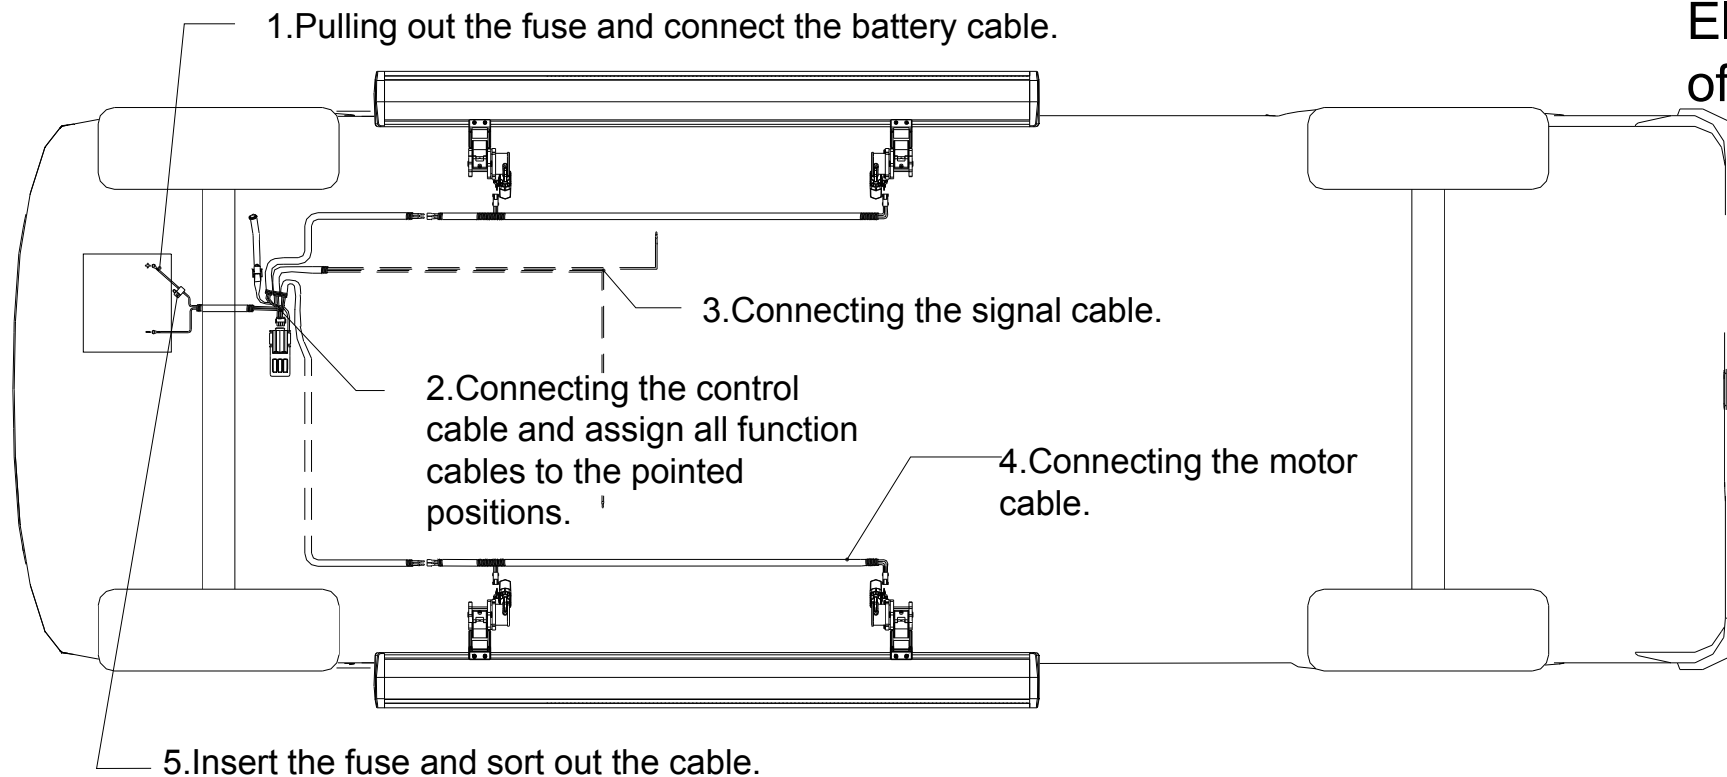

Step 4: Find the control input cable 10, pull out the fuse (ensuring the safety during installation) and connect the positive cable to the positive vehicle battery and connect the negative cable to the negative vehicle battery.


NISSAN NAVARA NP300

E-BOARD

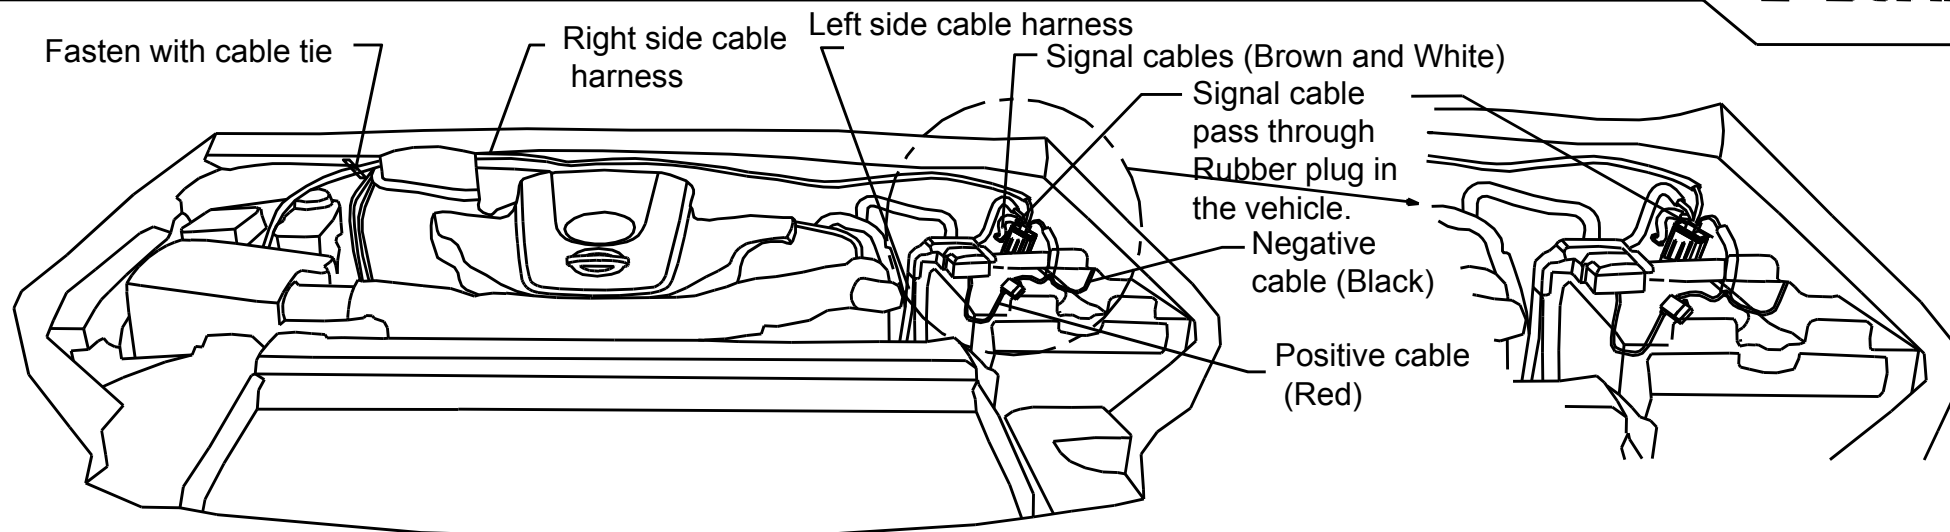


Step 5: As shown in the picture, fasten controller assembly by cable tie, and assign the cables according to the label. Motor Input cable pass through the vehicle floor to the vehicle bottom, and motor connection cable pass through the rubber plug in the engine compartment (at left side of vehicle) to the vehicle bottom, fix the cable harness on the vehicle by cable tie.


Left side cover plate 1 Left side cover plate 2

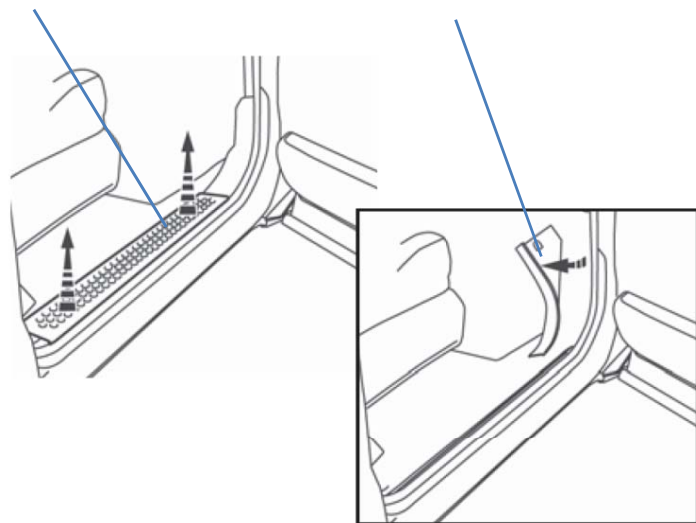


Step 6: Signal Cable Connection: Pry the cover of front, rear and middle pillar at left side, show as the left picture 1 & 2. Open the foot pad at left side, show as the right picture. The white and brown signal cable pass through the left side rubber plug in the engine room to the vehicle (please drill a hole on the rubber plug.). The brown signal cable pass through the left side cover 1 to the middle pillar at the left side, and the white signal cable pass through the left side cover 1 and rear seat foot pad to the middle pillar at right side.

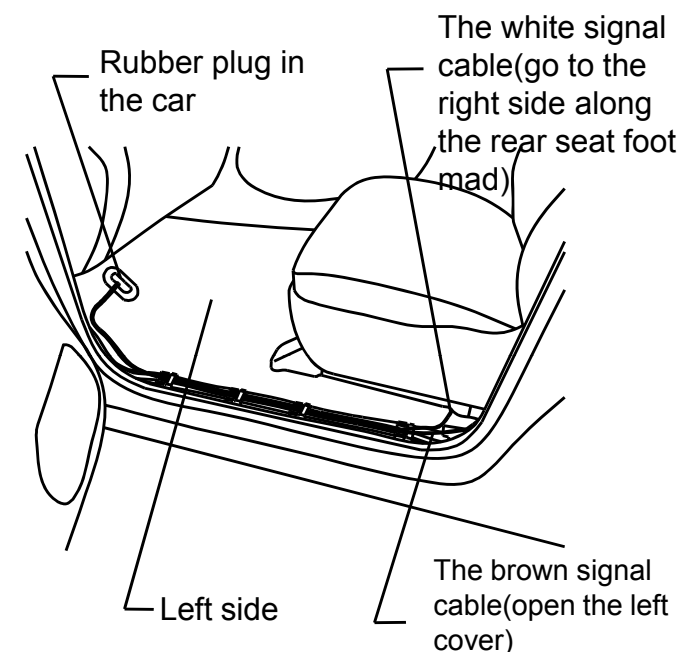



Introduction of magnetic inductor

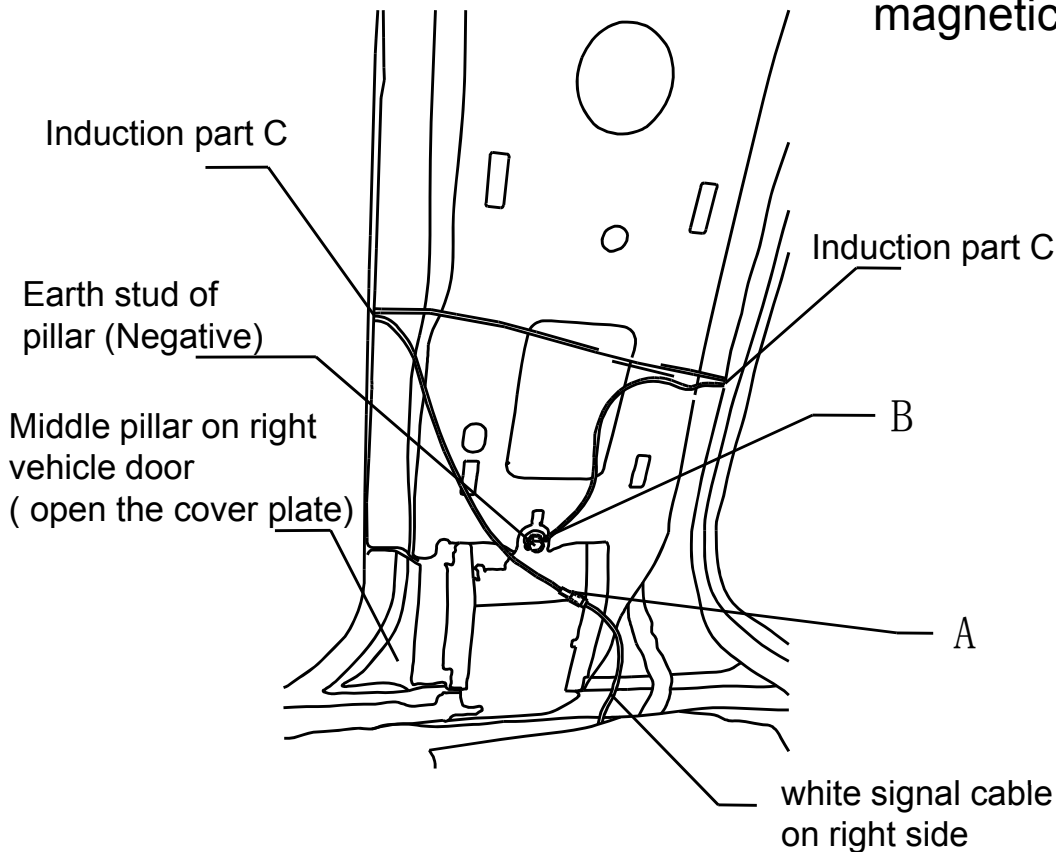


Step 7: Open the cover plate of middle pillar of passenger side vehicle door, expose the above part (as shown above), connect the white signal cable to terminal A, loosen the earth stud of middle pillar of vehicle (ensure there is no oil paint interface of stud and pillar), connect terminal B to the earth stud, and then tighten the earth stud. Stick the induction part C to the both side of pillar (shown above picture), stick the magnet on the inside of vehicle door which is corresponding with induction part. The connection of driver side brown signal cable and cable harness induction are same as the installation of the passenger side.

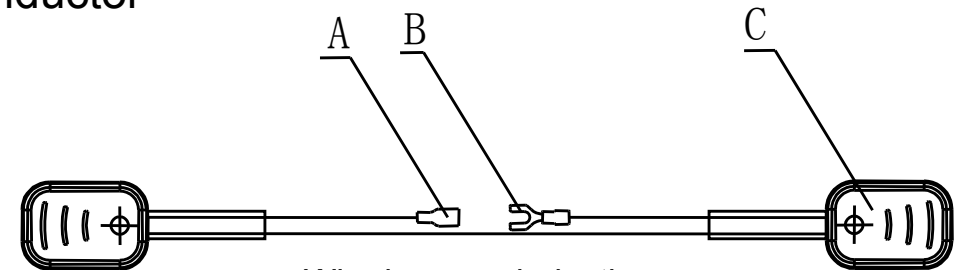


Wire harness induction

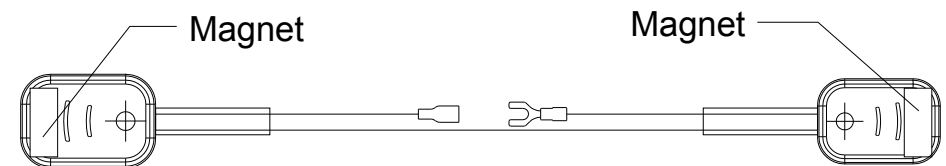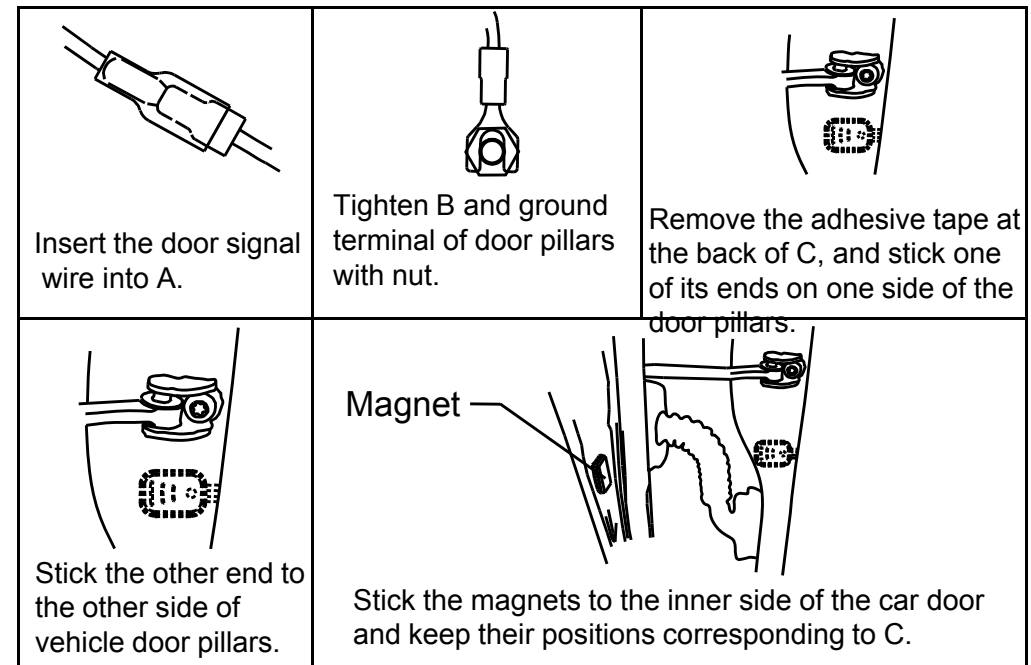

Instruction: When close the door, the magnet corresponding position is as shown in picture.

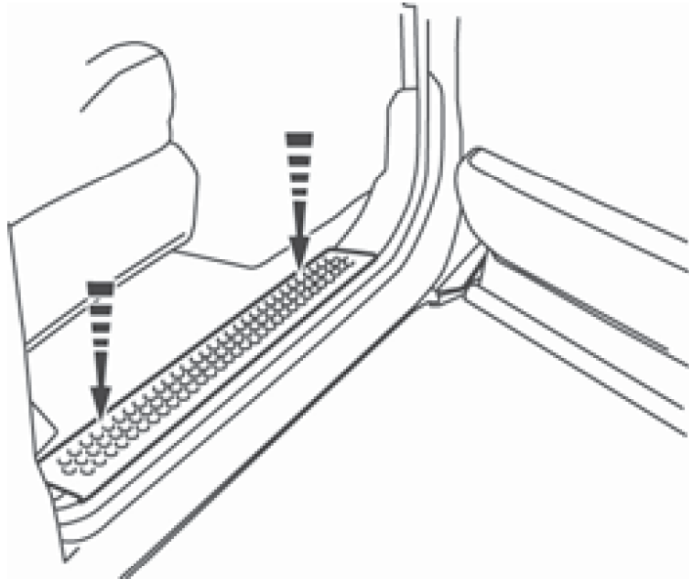


Step 8: Assign the cable in order and close the cover plate.

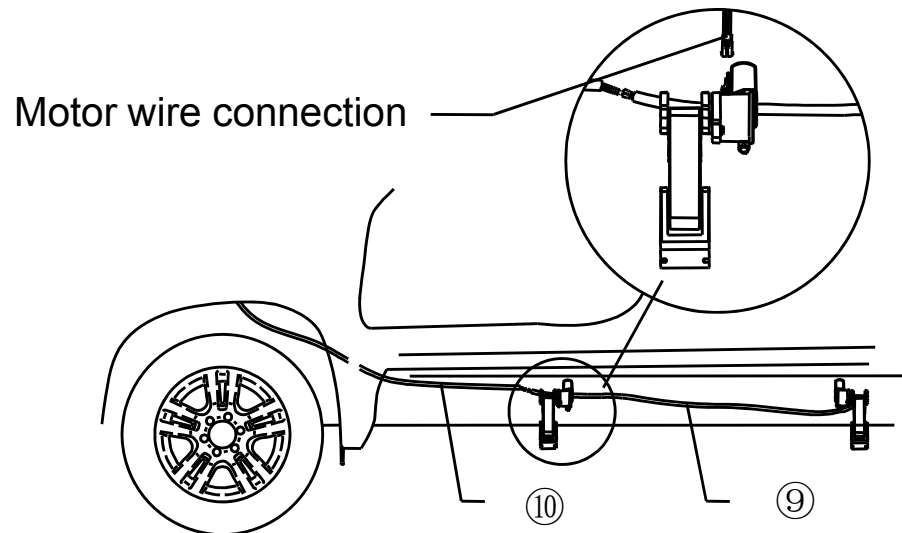


Step 9: Motor cable connection, connecting ⑨ motor connection cable with ⑩ control input cable and assign the cable along the vehicle beam. Note that the same color cable should be connected together. Fasten the cable on the vehicle beam by cable tie. Same cable installation is for the other side.

Summary of electric part

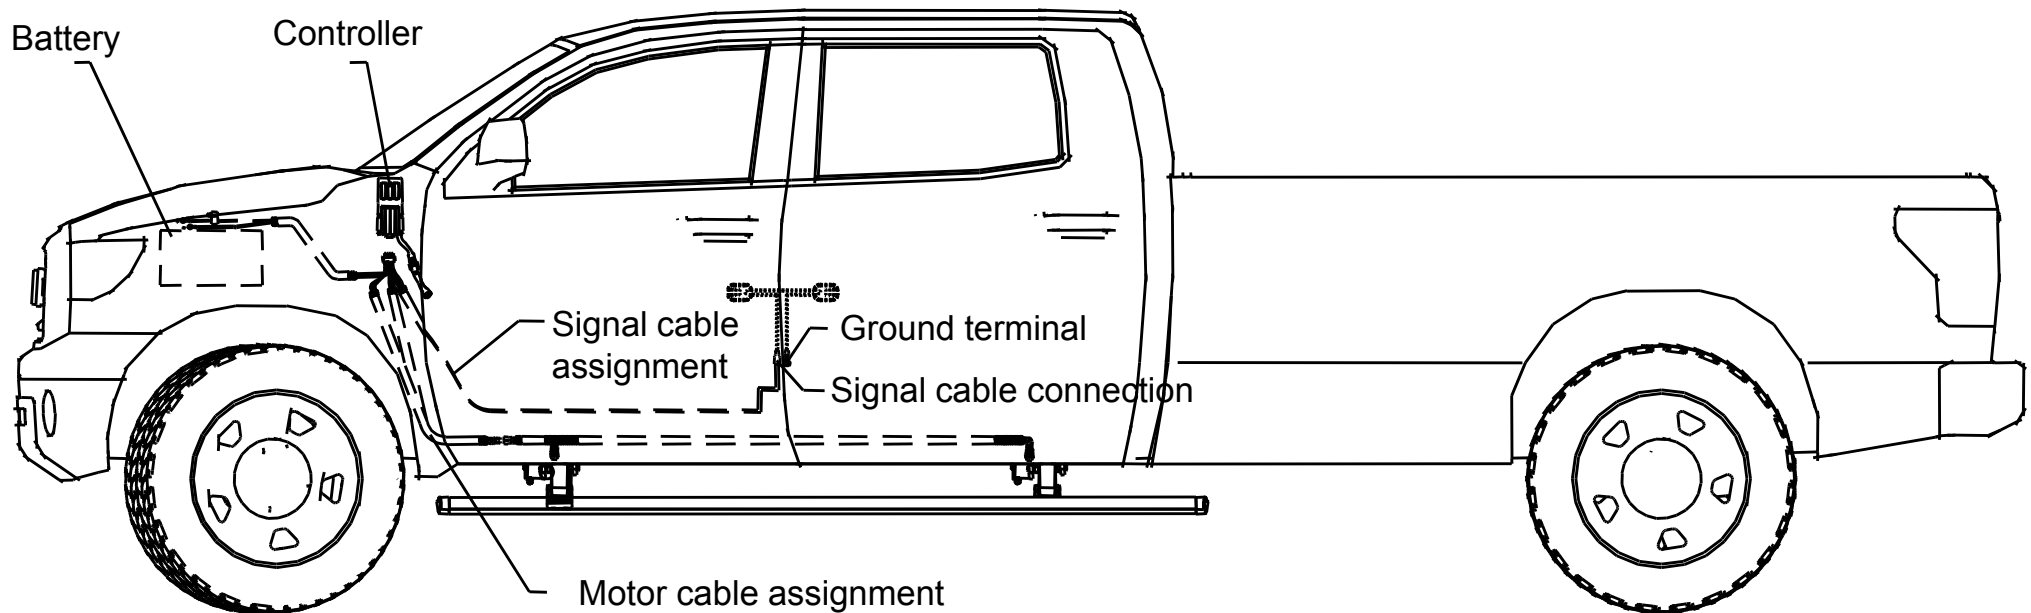

Step 10: Insert back the fuse, assign the cable in order. Check if all the cables are connected well and test if the power board can work normally. If it can work normally, the board installation is OK. (If it cannot work normally, please check the installation of each part.)

Instructions of Emergency Switch

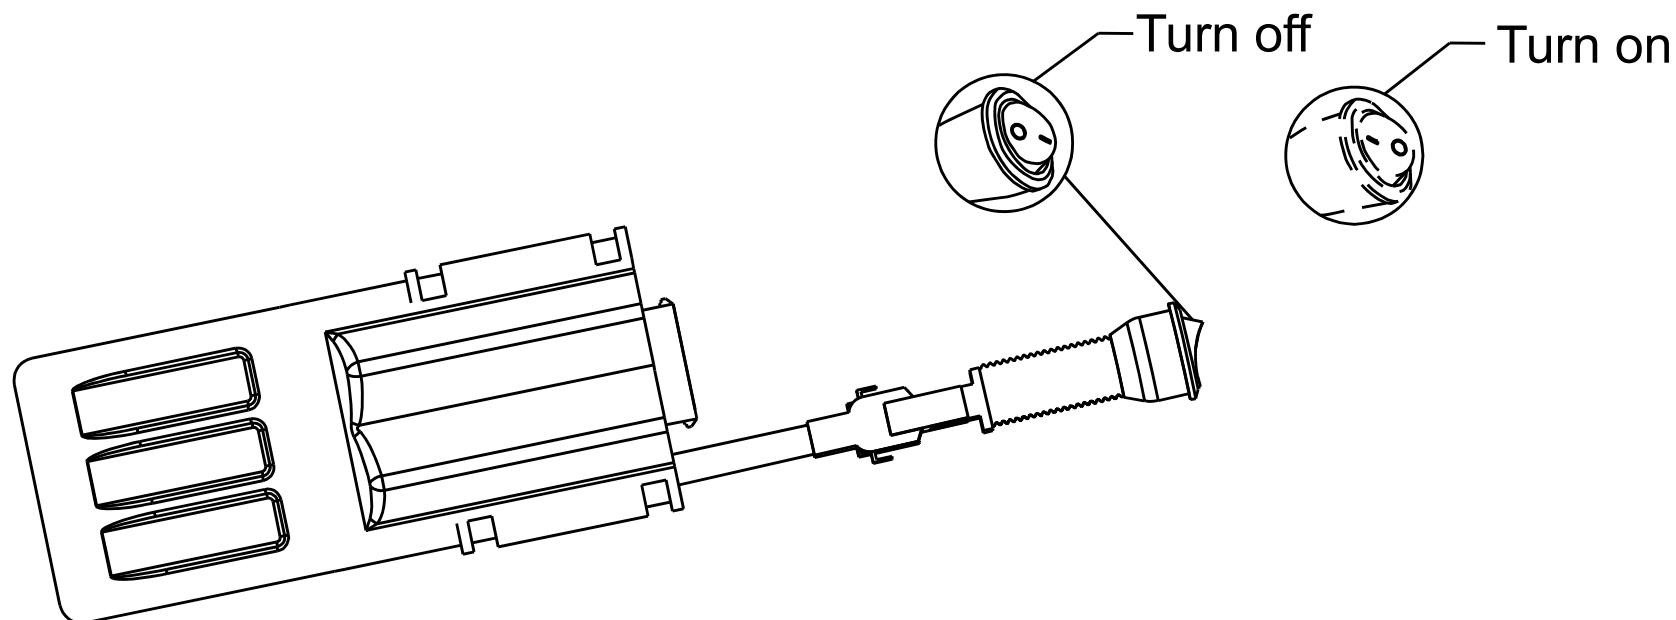

I. Function of emergency switch

Press the red switch button in case of any emergency or product failure to protect vehicle will not damage under these condition. Both boards will go back automatically while the emergency switch button is turned on.

II. The using condition of emergency switch:

1. Product failure;
2. User needs steps not work while the road / off-road situation is tough.
3. Please do not use power board if motor linkage or control cable is damaged.

III. Emergency switch using method:

1. Press emergency switch button, and the emergency switch is "on". And at the same time, the steps will automatically go back and stop working. In case of product failure, please contact with after-sales service.
2. Press the emergency switch button again, and the emergency switch is "off". And at the same time, the power board will return to its normal working status.
3. The original status of emergency switch is "off".

Maintenance		
3 months Periodical Inspection	Inspect the normal operation of the mechanism	
	Inspect damage for each joint of the control cable and the bare part outside of the girder	
	Inspect screws' looseness of motor and power board	
Special Case Inspection	Clean sediment on time for power board and its components	
	Clean ice on time for power board and its components	
Maintenance card		
The board couldn't activate when doors open and close	Electrical Malfunction	Fault of wiring the battery
		Fault of wiring door signal
		Fault of controller
		Fault of motor wiring
		Fault of motor
	Inspect the wiring according to the wiring layout when the door control signal failure occurs	
	Mechanics Malfunction	An object is block the board
		Boards are not mounting symmetrical

Note:In the use process, you may meet some other unknown trouble. Please contact us timely to feedback the problems, we will solve it for you as soon as possible. Thank you!

T-MAX Product Warranty Instructions

Thank you very much for using our product!

I Maintenance Instruction

- 1、 During warranty period, T-MAX provides free maintenance for any malfunction related to the manufacturer. Warranty period lasts 24 months or 5 kilo in 2 years after sale. For individual related faults, T-MAX provides paid maintenance.
- 2、 T-MAX promises to provide lifetime maintenance for Way Past Warranty and only charges for necessary material and labor. The charging standard refers to the ATM fee scale of local T-MAX terminal service provider.
- 3、 For all replaced parts, T-MAX ensures to provide maintenance within 12 months after the replacement.
- 4、 The ownership of the old parts from the replacement belongs to T-MAX (Hangzhou) Technology Co., Ltd.
- 5、 Within the limit of law, the interpretation of warranty policy belongs to T-MAX (Hangzhou) Technology Co., Ltd.

II Situations below will not offer free warranty:

- 1、 No warranty certificate;
- 2、 Fault caused by customer's misusing or Incorrect installation
- 3、 Fault caused by none professional maintenance staff's disassembly
- 4、 Fault caused by force majeure.
- 5、 Fault, scratch and torn due to movement or falling
- 6、 Fault caused by improper maintenance or misusing

III、 Precautions:

- 1、 In the case of extreme off-road, electric pedal is not recommended to avoid the damage of the pedal;
- 2、 After extreme off-road, start maintenance for electric pedal to protect the performance and the longevity of the pedal;
- 3、 Electrical parts: Check the control lines in T-MAX Terminal Services branch regularly;
- 4、 Mechanical parts: Pedal and pedal components should be cleaned up promptly when sediment appears;
- 5、 Power board should be using frequently. The idle time should not exceed three months;
- 6、 Power board need maintenance regularly in T-MAX terminal service branch;

E-BOARD[®]

Produced by
T-MAX(HANGZHOU)TECHNOLOGY CO.,LTD

www.tmax.biz